 


Performance Parameters

Placement

Place the unit with a TV

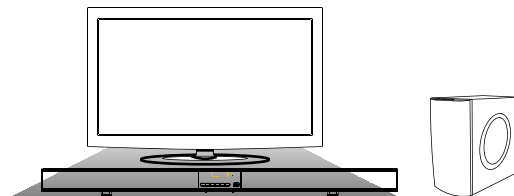

Speaker Specification	
Cell	Speaker: 4 cells; Subwoofer: 1 cell
Frequency Range	Speaker: 500~20000; Subwoofer: 20~300
Sensitivity (dB)(HZ)?dB	Speaker: 83; Subwoofer: 88
Impedance(Ω) \pm 20%	Speaker: 4; Subwoofer: 4
Recommended Power (W)	Speaker: 10; Subwoofer: 30
Main Channel Output Power	10W+10W (4 Ω , 1KHz, 0.7%THD)
Bass Output Power	30W (4 Ω , 100Hz, 0.7%THD)
Main Channel Frequency Response	20Hz~20KHz \pm 2dB
SNR	> 75dB (AFR)
Input Voltage	15 V \pm 5%
Rated Power	50W
Maximum Operation Current	3.5A
Input Signal Source	Optical, AUX Terminal, Bluetooth, USB, Coaxial.
Distortion	\leq 1%
Separation	\geq 40dB
Dynamic Range	\geq 90dB
Optical Sampling Frequency Decoding	8KHz~96KHz DAC: 24BIT 96KHz Stereo

JVC

Service Oficial JVC

San Jose 976
Tel 29023109
rma@serviceoficial.com.uy
www.serviceoficial.com.uy

JVC

 
2.1CH SOUND BAR

TH-BY370U




User Manual

EN-PT-ES

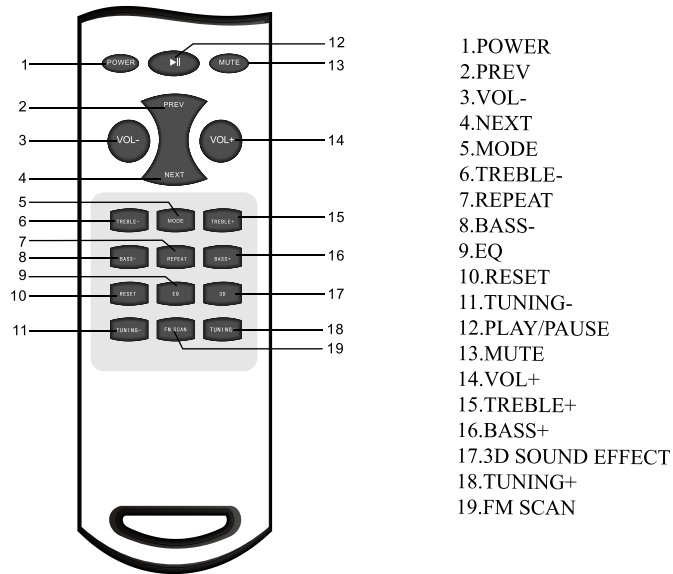


Panel Markings

 
FRONT

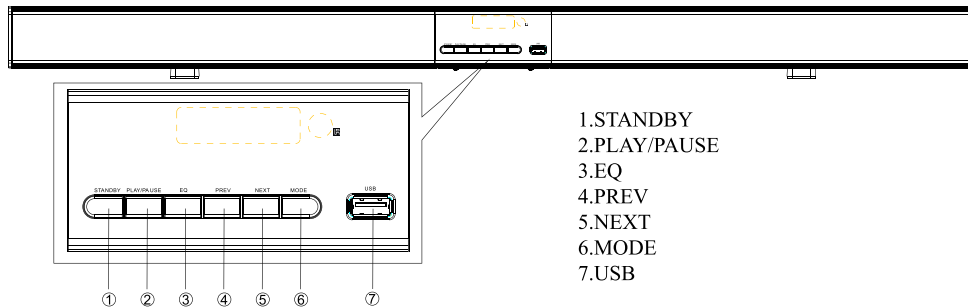

BACK

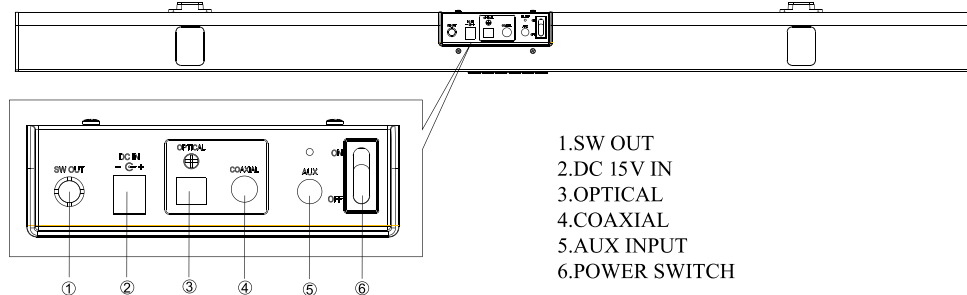 

Power Supply

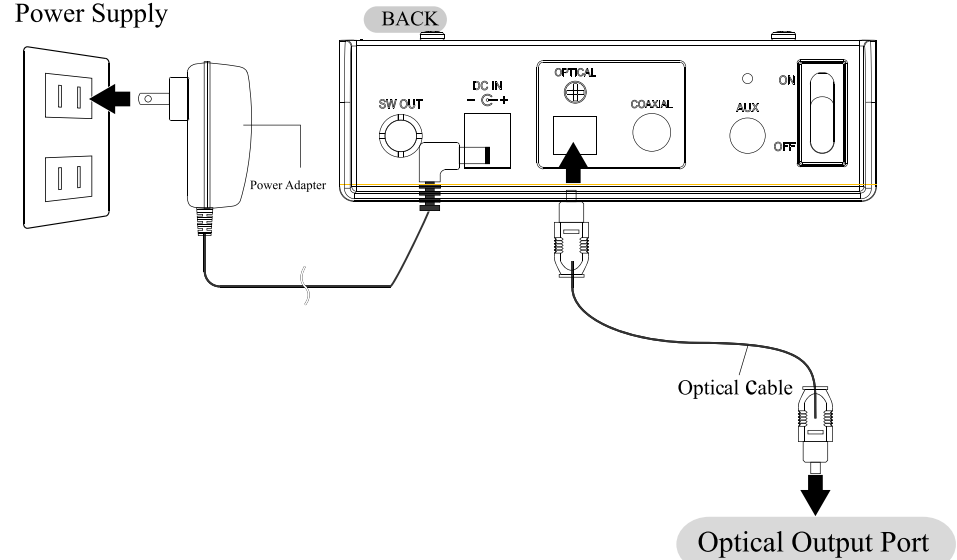 

Operating Instructions

Please read these operating instructions carefully before use.

1. Ensure that the voltage requirements for the unit match those of your mains power supply. Please see rating label for information. Plug the power cable into the wall power socket. Turn the power switch on at the back of the unit. The unit will initially be set in Standby mode. Press the Power button on the remote control and a green light will blink once and turn on.
2. Press the Mode button to select which source you want to use such as: BLUETOOTH, USB, OPTICAL, AUX, COAXIAL.
 - 2.1 BLUETOOTH: After selecting Bluetooth mode, the blue light on the front panel will flash and make a "beep" sound. You can now search and pair with the TH-BY370U device from your phone or computer.
 - 2.2 USB: When you select USB mode, you may plug a USB into the unit and it will play the music stored on the USB.
 - 2.2.1 Please note that the USB mode is the primary media mode, so even if you are listening to music via AUX mode, when you plug a USB into the unit, the USB will start to play.
 - 2.2.2 Please note that the order in which the tracks are saved on the USB is how they will be played once the USB is plugged into the unit.
 - 2.2.3 If you want to select a specific track, e.g. 31, all you need to do is press 3 and 1 and then
 - 2.3 OPTICAL: By selecting Optical mode, you will be able to play music from an optical device.
 - 2.4 AUX: By selecting AUX mode, you will be able to play tracks from an AUX device.
3. You can increase or decrease Volume, Treble or Bass by pushing the + or - corresponding buttons on the remote control.
4. In order to reset to factory setting press the Reset button.